

**Drill template 1**  
Headplate bracket

Key to lines:  
— Can be folded here  
— Die cut  
— Perforate

40

Drill template can be used for left and right sides of system.  
 After standard assembly, indent and place up against the inside.  
 For more information, see chapter on drill templates in the  
 Sottezza II assembly instructions.

17

Arrester! Do not fold

Mark/centre-punch  
positions of drill

40

Mark/centre-punch  
positions of drill

Arrester! Do not fold

Fold template here and,  
 after standard assembly,  
 indent and place edge/  
 arrester up against the  
 inside edge of the  
 roof support.

Mark/  
 centre-punch  
 positions of drill


Z 0000-20811/51800001



118082

Spacing to guttering 20

Key to lines:  
— Can be folded here  
— Die cut  
— Perforate

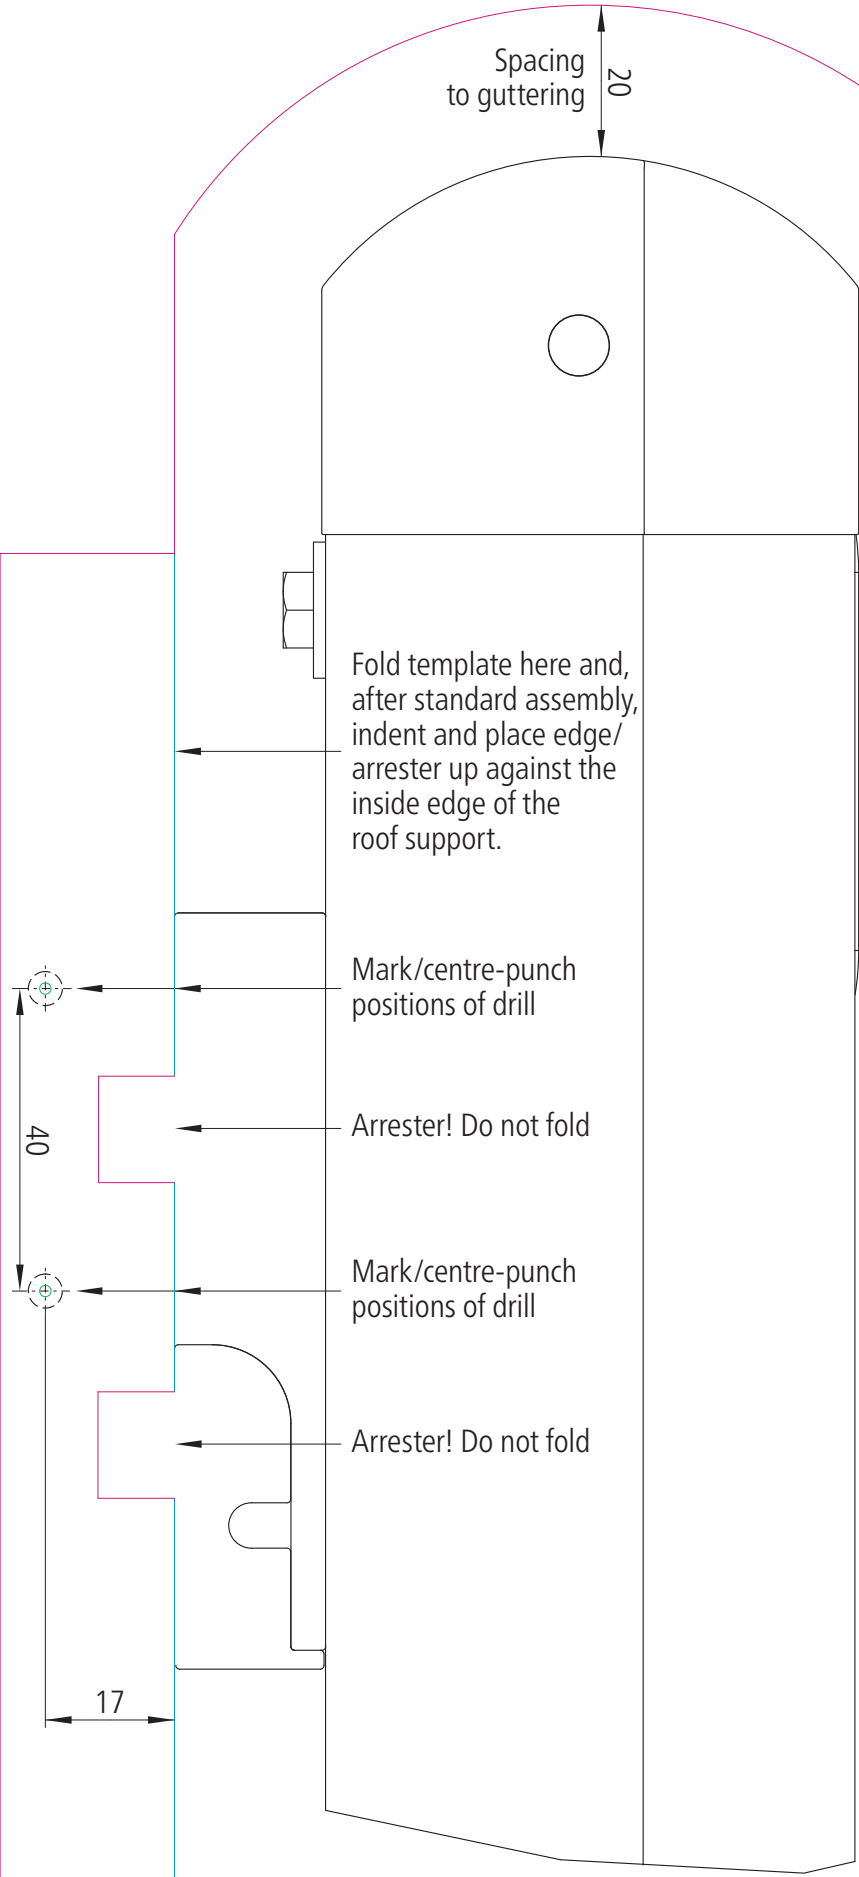

Fold template here and, after standard assembly, indent and place edge/arrester up against the inside edge of the roof support.

Mark/centre-punch positions of drill

Arrester! Do not fold

Mark/centre-punch positions of drill

Arrester! Do not fold

### Drill template 2 Side channel bracket

Drill template can be used for left and right sides of system. After standard assembly, indent and place up against the inside. For more information, see chapter on drill templates in the Sottezza II assembly instructions.


Z 0000-280811/15180/0001



118082

**Drill template 3**  
Distance rope bracket

Fold template here and place  
edge/arrester up against the  
inside of the side channel.

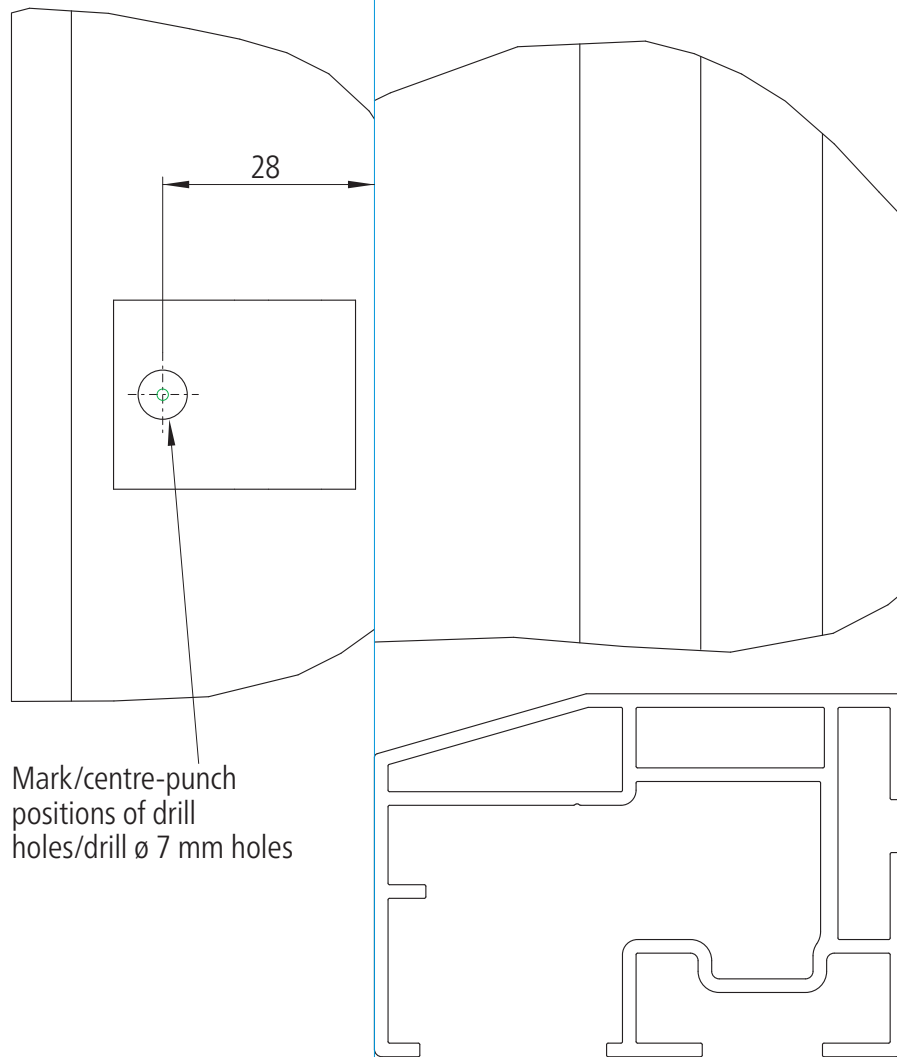

Mark/centre-punch  
positions of drill  
holes/drill  $\varnothing$  7 mm holes

place up against  
inside

Key to lines:  
— Can be folded here  
— Perforate

1.000.0815/118082-0000 Z



118082